


INSTALLATION INSTRUCTIONS

INSULATION SLEEVES


PE 30/60/100

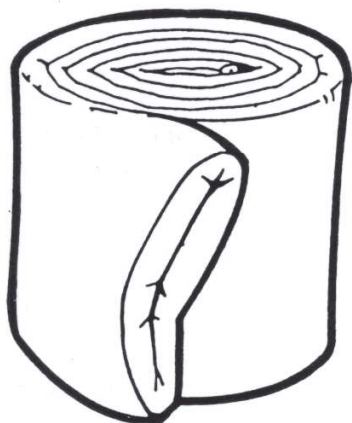


1 Supplied in rolls



2 Rolled out and installed (pulled on).

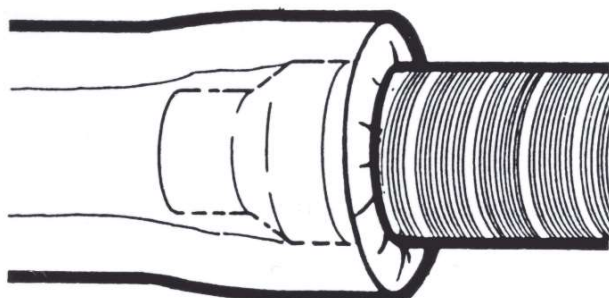

3 Use end reduction during installation.

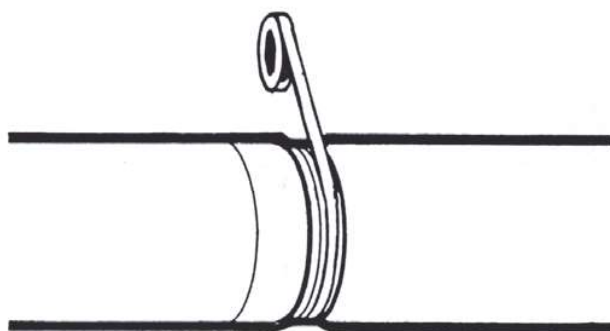

4 Overlap. Tape.